Autonics

DIGITAL PANEL METER M4M SERIES

INSTRUCTION MANUAL



Thank you for choosing our Autonics products. Please read the following safety considerations before use.

Safety Considerations

XPlease observe all safety considerations for safe and proper product operation to avoid hazards.

XSafety considerations are categorized as follows.

Warning Failure to follow these instructions may result in serious injury or death.

^Caution Failure to follow these instructions may result in personal injury

XThe symbols used on the product and instruction manual represent the following. ⚠ symbol represents caution due to special circumstances in which hazards may occur.

▲ Warning

1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss, (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)

Failure to follow this instruction may result in fire, personal injury, or economic loss.

- 2. Install on a device panel to use.
- Failure to follow this instruction may result in electric shock or fire.
- 3. Do not connect, repair, or inspect the unit while connected to a power source. Failure to follow this instruction may result in electric shock or fire.
- 4. Check 'Connections' before wiring.
- Failure to follow this instruction may result in fire.
- 5. Do not disassemble or modify the unit.

Failure to follow this instruction may result in electric shock or fire.

▲ Caution

1. When connecting the power/measurement input and relay output, use AWG 24 (0.20mm²) to AWG 15(1.65mm²) cable and tighten the terminal screw with a tightening torque of 0.98 to 1.18N·m.

 
Use proper cables for the rated load current.

Failure to follow this instruction may result in fire or malfunction due to contact failure.

- 2. Use the unit within the rated specifications.
- Failure to follow this instruction may result in fire or product damage.
- 3. Use dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in electric shock or fire.
- 4. Do not use the unit in the place where flammable/explosive/corrosive gas, humidity, direct sunlight, radiant heat, vibration, impact, or salinity may be present. Failure to follow this instruction may result in fire or explosion
- 5. Keep metal chip, dust, and wire residue from flowing into the unit. Failure to follow this instruction may result in fire or product damage.


Dimensions

 Panel cut-out 126



- XThe above specifications are subject to change and some models may be discontinued without notice.
- ※Be sure to follow cautions written in the instruction manual and the technical descriptions (catalog, homepage).

Ordering Information

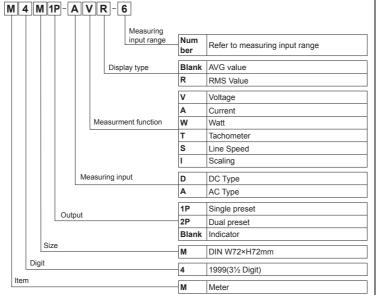

Measuring input range Range Model AV(R) 199.9mV 1.999V 19.99V 199.9V 400V Option AA(R) 19.99mA | 199.9mA | 1.999A | 19.99A | 199.9A 1999A DV 199.9mV 1.999V 19.99V 199.9V 300V l_ Option - 199.9µA | 1.999mA | 19.99mA | 199.9mA | 1.999A | 19.99A | 199.9A | 199.9A | 199.9A | DA ___ 199.9W 1.999kW 19.99kW 199.9kW 1999kW ___ Option ____ 1999rpm | 1999rpm T(R)

 
- X1: When the output of power converter is 10VDC, measuring input value is maximum. In case that output is DC4-20mA, scaling meter should be used. x2: 1-5VDC measuring input is optional.
- *Power converter should be used with Watt meter and Tachometer/Line speed meter should be used with Tacho-generator.
- *When "1999" or "1999" is flashes with a certain measurement input, disconnect power supply and then check the cables.

M4M-DV-


M4M-AV-

Connections

XUse terminals of size specified below



• M4M

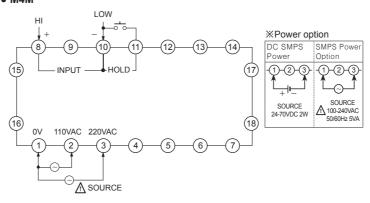


M4M1P

M4M-AA-

M4M-W-

Option

M4M-DA-

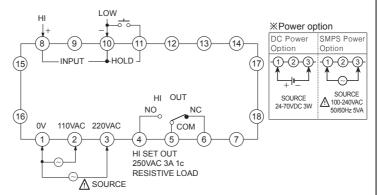


M4M-T-_-

M4M-S-□-□

M4M-DI


M4M2P

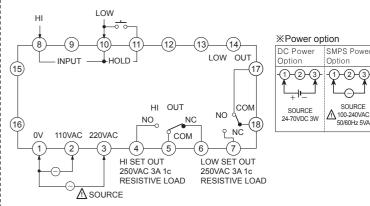

Connections of Applications

Simultaneous connection of voltmeter and ammeter

 
• For DC power supply



DC power supply 1 DC power supply 2

- X1: Compared to measurement input range, higher measuring voltage needs a multiplier and lower measuring voltage needs a shunt.
- When using voltmeter and ammeter simultaneously, connect the separated power supply each
- \(\frac{\pi}{\cupee}\) (-) terminal of the power and (-) terminal of measurement input are shorted.

 For AC power supply



X1: When measuring higher current than measurement input, use a shunt for DC current and a current transformer (CT) for AC current.

Specifications

1999 -

S(R)


(unit: mm)

____ 1999m/min 1999m/min

Model		M4M1P-DV- M4M2P-DV-	M4M1P-AV- M4M2P-AV-	M4M1P-DA- M4M2P-DA-	M4M1P-AA- M4M2P-AA-	M4M1P-W- M4M2P-W-	M4M1P-T M4M2P-T M4M2P-	M4M1P-S M4M2P-S	M4M1P-DI M4M2P-DI
Max. input		Max. 300VDC==	Max. 400VAC \sim	Max. DC 2A	Max. AC 5A	Max. 10VDC==	Max. 10VDC==,	Max. 10VAC \sim	DC4-20mA
		150% for each input specification(at 400VAC~:120%)							
Max. display range		Max. 1999							
Measurement function		DC voltage	AC voltage	DC current	AC current	AC watt	rpm	Speed	Scaling meter
Power supply		110/220VAC~ 50/60Hz(Option:100-240VAC~ 50/60Hz, 24-70VDC==)							
Allowable voltage range		90 to 110% of rated voltage							
Power consumption		DC: 2W, AC: 4VA (At 1P, 2P-DC: 3W, AC: 5VA)							
Display method		7Segment LED Display(Character height: 10mm)							
Sampling cycle		300ms							
A/D conversion method		Dual slope intergal method							
Response time		2sec(0 to 1999)							
Sampling times		2.5 times/sec							
Insulation resistance		Over 100MΩ(at 500VDC megger)							
Dielectric strength		2000VAC 50/60Hz for 1 minute							
Noise immunity		±1kV the square wave noise(pulse width:1µs) by the noise simulator							
Vibration	Mechanical	0.75mm amplitude at frequency of 10 to 55Hz in each X, Y, Z direction for 1 hour							
	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz in each X, Y, Z direction for 10 minutes							
Shock	Mechanical	300m/s²(approx. 30G) in each X, Y, Z direction for 3 times							
	Malfunction	100m/s²(approx. 10G) in each X, Y, Z direction for 3 times							
Environment	Ambient temperature	-10 to 50°C, storage: -25 to 65°C							
	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH							
Output capacity		M4M: Non, M4M1P: 250VAC 3A 1c, M4M2P: 250VAC 3A 1c×2							
Relay life cycle	Mechanical	Min. 10,000,000 times							
	Electrical	Min. 100,000 times(250VAC 3A resistive load)							
Display accuracy		DC: F.S. ±0.2% rdg ±1Digit 23°C ±5°C, AC: F.S. ±0.5% rdg ±1Digit 23°C ±5°C							
Unit weight		M4M: Approx. 262g, M4M1P: Approx. 290g, M4M2P: Approx. 316g							
	nt resistance is rated at n	o freezing or conde	ensation.						

Cautions during Use

 - Follow instructions in 'Cautions during Use'
- Otherwise, it may cause unexpected accidents
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Keep away from high voltage lines or power lines to prevent inductive noise. In case installing power line and input signal line closely, use line filter or varistor at power line and shielded wire at input signal line.
- Do not use near the equipment which generates strong magnetic force or high frequency noise.



This unit may be used in the following environments. ①Indoors (in the environment condition rated in 'Specifications')

③Pollution degree 2

4 Installation category II

Major products

Photoelectric Sensors ■ Temperature Controllers iber Optic Sensors Temperature/Humidity Transducers

| Temperature/rumidity Transducei
| Door Sensors |
| Door Side Sensors |
| Area Sensors |
| Proximity Sensors |
| Pressure Sensors |
| Tachometer/Pulse (Rate) Meters |

Switching Mode Power Supplies
Control Switches/Lamps/Buzzers
/O Terminal Blocks & Cables
Stepper Motors/Drivers/Motion Controllers

Graphic/Logic Panels ■ Graphilo Logic Failars
■ Field Network Devices
■ Laser Marking System (Fiber, Co₂, Nd: YAG)
■ Laser Welding/Cutting System

Autonics Corporation ■ HEADQUARTERS: 18, Bansong-ro 513beon-gil, Haeundae-gu, Busan, South Korea, 48002 TEL: 82-51-519-3232

DRW170800AA