# 7 inch Wide Screen, TFT Color LCD Type **Graphic Panel + PLC Function Logic Panel LP-S070**

### Features

- Supports cost reducing, space saving, easy control by PLC+HMI+I/O module integration
- Adopts 7 inch wide TFT LCD for realizing True Color with 16,777,216 colors
- Analog touch method
- Free tag arrangement than matrix touch method
- Supports basic I/O of input 16-point, output 16-point
- Supports several device

(auxiliary device 10K Word, data device 10K Word, etc)

- Built-in large capacity memory (program memory: 8,000 step, drawing memory: 16MB)
- Built-in position control function
- : Provides simultaneous output for max. 100kHz pulse 2-point • Easy software upgrade available on website
- (1) LP firmware file

(2) GP Editor (drawing program)

(4) Additional protocol

- (3) SmartStudio (logic program) (5) Language and font, etc
- Data logger function
  - Supports data gathering and backup of controller
- Supports variable image library
- Enables to monitor multi stations and multi channels at the same time
- Supports several interface
  - : Easy to connect various external devices with RS232C 2 ports and RS232C/RS422 multi communication ports
  - Enables to extend additional external I/O (when connecting Autonics ARM Series, one communication cable enables to extend 64-point per address, up to 31 address)



- Supports several fonts: Supports window true type and several bitmap font (selectable)
- Device monitoring function: Enables to monitor/control variable of connected control through communication
- Printer/Barcode reader connection: Enables to print out alarm history, to read barcode



#### Manual

For the detail information and instructions, please refer to user manual and user manual for communication, and be sure to follow cautions written in the technical descriptions (catalog, homepage). Visit our homepage (www.autonics.com) to download manuals.

#### • GP Editor user manual

It describes how to write screen data, and is about related usage of LP-S070 HMI function.

- SmartStudio user manual, SmartStudio programming manual, LP Series command manual It contains install method and usage, commands, etc of SmartStudio.
- GP, LP user manual for communication: It describes connection for external devices such as PLC.
- LP-S070 user manual: It describes general information of the installation and usage of LP-S070 and system Contents.

### Ordering Information

Model	Item	Series	Monitor size	Display unit	Color	Power supply	Interface	Module	I/O composition	I/O connector
LP-S070-T9D6-C5T	Logic panel	S series	7 inch	TFT Color LCD	16,777,216 color	24VDC	RS232C, RS422, USB HOST	All-in- one type	IN: 16-point, OUT: 16-point	Terminal block connector
LP-S070-T9D6-C5R							USB DEVICE, Ethernet			Ribbon cable connector
LP-S070-T9D7-C5T							RS232C (2), USB HOST			Terminal block connector
LP-S070-T9D7-C5R							USB DEVICE, Ethernet			Ribbon cable connector



7 inch TFT Color LCD

## Specifications

Model	<del>-</del>	LP-S070-T9D6-C5T	LP-S070-T9D6-C5R	LP-S070-T9D7-C5T	LP-S070-T9D7-C5R			
I/O connector type		Terminal block connector	Ribbon cable connector	Terminal block connector	Ribbon cable connector			
Power	supply	24VDC=						
Allowa	able voltage range	90 to 110% of power supply						
Power	consumption	Max. 7.2W						
	LCD type	7 inch TFT Color LCD						
Graphic drawing performance	Resolution	800×480 dots						
	Display area	152.4×91.44mm						
	Color	16,777,216 color						
	LCD view angle	Within each 60°/ 45°/ 60°/	60° of top/bottom/left/right					
Gra	Backlight	White LED						
	Brightness	Adjustable by software						
g	Language*1	English, Korean						
Graphic drawing performance	Text	Vector font         • 6×8, 8×8 ASCII character, high definition numbers         • 8×16 ASCII characters, 16×16 character by each country (1 to 8 times bigger for width, 0.5 to 5 times bigger for height)						
hic forr	Graphic drawing memory	16MB						
rapl	Number of user screen	500 pages						
<u>G</u>	Touch switch	Analog touch						
	Command	Basic command: 28, application command: 233						
Ф	Program capacity	8K step						
ol anc	Processing time	Average: approx. 2us/basic command, application command						
Control	I/O control type	Batch processing						
Control	Computer control mode	Repeated-doubling method, interrupt processing						
Ф	Device range	Refer to 'LP-S070 user manual'						
	Special function*2	Positioning function						
Serial interface		Asynchronous method: each port of RS232C, RS422						
	Interface	Each port of RS232C, RS422 Two ports of RS232C						
USB i	nterface	Each of USB Host, USB Device (Version 1.1)						
Etherr	net interface	IEEE802.3 (U), 10/100Base-T						
	ime controller	RTC embedded						
Batter	y life cycle	Approx. 3 years at 25°C						
Insula	tion resistance	Over 100MΩ (at 500VDC megger)						
Groun	d	3rd grounding (max. $100\Omega$ )						
	immunity	±0.5kV the squre wave noise (pulse width: 1μs) by the noise simulator						
Withstanding voltage		500VAC 50/60Hz for 1 min						
Vibra	Mechanical	<u> </u>		min) in each X, Y, Z directio				
tion	Malfunction	0.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 10 min						
Shock	Mechanical	300m/s² (approx. 30G) in each X, Y, Z direction for 3 times						
	Malfunction	100m/s² (approx. 10G) in each X, Y, Z direction for 3 times						
Enviro		0 to 50°C, storage: -20 to 60°C						
ment	Ambient humidity	35 to 85%RH, storage: 35 to 85%RH						
Protection structure		IP65 (front panel, IEC standard)						
Accessory		Fixing bracket: 4, battery (included)						
Appro	· · ·	CE						
Weigh	ıt <sup>⊛3</sup>	Approx. 699g (approx. 510	Og)					

### Input/Output Performance

•		1		
Input performance		Output performance		
Input point	16-point	Output point	16-point	
Insulation method	Photo coupler insulation	Insulation method	Photo coupler insulation	
Voltage range	19.2 to 28.8VDC	Voltage range	19.2 to 28.8VDC	
Rated input voltage	24VDC	Rated input voltage	24VDC	
Input resistance	Contact X0 to X5: approx. 10mA Contact X6 to XF: approx. 4mA	Max. load current	0.1A/1point, 1.6A/1COM	
Input resistance	Contact X0 to X5: 2.2kΩ, Contact X6 to XF: 5.6kΩ	Max. voltage falling when ON	Max. 0.2VDC	
Response time	1ms	Response time	1ms	
Common method	16-point/1COM	Common method	16-point/1COM	
Acceptable wire	0.3 to 0.7mm <sup>2</sup>	Acceptable wire	0.3 to 0.7mm <sup>2</sup>	

(A) Photoelectric Sensors

(C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

(I) SSRs / Power Controllers

(J) Counters

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

R-27 **Autonics** 

X2: Please refer to 'LP-S070 user manual' for more special function.

<sup>X1: Supported language can be added.
X2: Please refer to 'LP-S(
X3: The weight includes packaging. The weight in parenthesis is for unit only.
XEnvironment resistance is rated at no freezing or condensation.</sup> 


# **■** Functional Description

Fig	ure display	Line, rectangle, circle, text, bitmap				
	Numeral display	Displays the designated device as numerical value. (decimal, hexadecimal, octal, binary, real number)				
	ASCII display	Displays the designated device value as ASCII character.				
	Time display	Displays current time or date.				
	Alarm history	Registers alarm history.				
	Alarm list	Displays generated (not backed up) alarm.				
	Comment display	Displays the designated comment as device status or value.				
	Lamp	Displays lamp as device status.				
gs	Part display	Displays the designated parts as device status and value.				
ā	Line graph	Displays several device values with a graph of broken line.				
	Trend graph	Displays change of device value for time with a graph of broken line.				
	Bar graph	Displays a device value with a bar graph.				
	Statistic graph	Displays a ratio of several device values with pie graph.				
	Panel meter	Displays a device value as panel meter.				
	Touch key	Screen is switched, word/bit device values are set when it touched.				
	Numeral input	Configures user input value in device.				
	ASCII input	Configures user input ASCII code value in device.				
Sys	stem information function	Monitors/Controls LP operation from PLC.				
Re	cipe function	Reads/Writes several PLC device collectively.				
Sed	curity function	Only acceptable user can observe/operate important data.				
Barcode read function		Connects barcode reader, read barcode.				
Flo	ating alarm function	Warning message is floated when alarm is generated.				
Tim	ne operation	Specific bit device is ON/OFF for designated day and time.				
Ove	erlap window	Available to form dynamically overlapping another base screen on the base one.				
Sys Rec Sec Bar Flo	Part display Line graph Trend graph Bar graph Statistic graph Panel meter Touch key Numeral input ASCII input stem information function curity function curity function ating alarm function ne operation	Displays the designated parts as device status and value.  Displays several device values with a graph of broken line.  Displays change of device value for time with a graph of broken line.  Displays a device value with a bar graph.  Displays a ratio of several device values with pie graph.  Displays a device value as panel meter.  Screen is switched, word/bit device values are set when it touched.  Configures user input value in device.  Configures user input ASCII code value in device.  Monitors/Controls LP operation from PLC.  Reads/Writes several PLC device collectively.  Only acceptable user can observe/operate important data.  Connects barcode reader, read barcode.  Warning message is floated when alarm is generated.  Specific bit device is ON/OFF for designated day and time.				

# Dimensions (unit: mm) • Panel cut-out Min. 240 185 Max. 4-R3 186<sup>+1.1</sup> 126+10 175 . E ※Panel thickness : max. 4mm 6.5 28.5 194 • Fixing bracket M4 BOLT 125

R-28 Autonics


## Unit Description

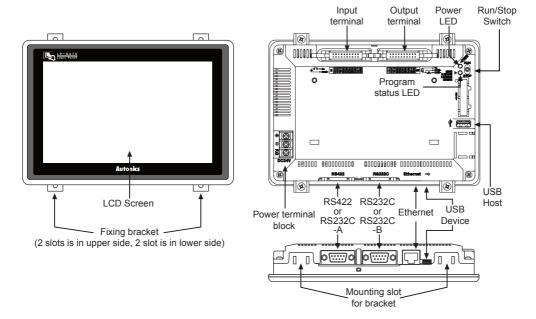


- Ethernet port: For connecting LAN cable and hub, use direct cable, and for connecting PC directly, use cross cable.
- USB Device: When setting USB Device mode to HID mode in serial setting, it is for uploading/downloading GP Editor, SmartStudio project. When setting to Storage mode, it is for transferring/coping data between PC and LP-S070 with recognition as a storage device by PC.
   For details, please refer to 'LP-S070 user manual'.
- USB Host: It is for transferring/coping data between USB storage device and LP-S070 and upgrading firmware.
- RS232C, RS422 port: For more information, refer to '■ Serial Interface' of GP/LP Common Features.

#### Installation

- 1. Set LP-S070 in panel.
- 2. Set fixing brackets in 4 slots (2 slots is in upper side, 2 slots is in lower side).

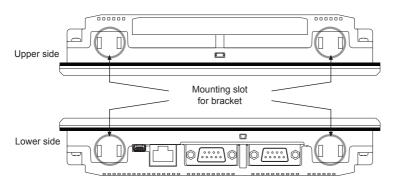

3. Tighten fixing bracket with M4 screw driver and tightening torque is 0.3 to 0.5N·m.

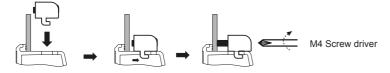

(A) Photoelectric Sensors

(B) Fiber Optic

> (C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

> (F) Rotary Encoders

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

(J) Counters

(K) Timers

> \_) anel

(M) Tacho / Speed / Pulse Meters

(N) Display Units

(O) Sensor Controllers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

(S) Field Network Devices


> T) oftware

Autonics R-29


### **■** Input·Output Wiring

### © LP-S070-T9D6 (7)-C5R

• Input wiring (source type input module)

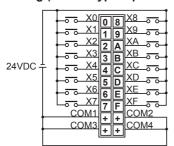


• Output wiring (sink type output module)

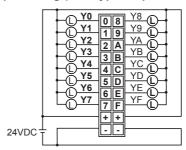


### © LP-S070-T9D6 (7)-C5T

• Input wiring (source type input module)

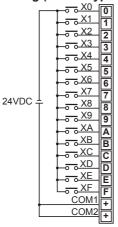

• Output wiring (sink type output module)

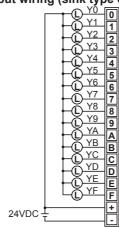

XCheck the pin number of the case before wiring.

## **■** Sold Separately

#### O I/O terminal block and I/O cable

Suitable I/O terminal block INPUT/OUTPU		Suitable I/O cable		
AFS-H20	INPUT	-CJ-HPHP20-V1N□-1ANR		
(interface terminal block)	OUTPUT	-CJ-HPHP2U-VINTANK		
ABS-H16PA (TN)-NN (relay terminal block)	OUTPUT	CJ-HPHP20-V1N□-1APR		
AFE4-H20-16LF	INPUT	CJ-HPHP20-V1N□-1BNR		
(sensor connector terminal block)	OUTPUT	CJ-HPHP20-V1N□-1APR		
	l —	CJ-HP20-VP□-R (OPEN type cable)		
		CJ-HP20-VP□-L (OPEN type cable)		

XIt is only for ribbon cable connector (hirose connector) type.

X"□" is cable length. (basic specification 010: 1m, 020: 2m, the others are option)

### **○** Communication cable (RS232C, RS422 port)

Serial connection cables which connect GP/LP with PLC or other external devices are sold separately. Refer to "GP/LP Communication Cables".

R-30 Autonics

XFor more information, refer to "I/O Terminal Blocks & Cables Catalog".