




User Manual

ds851LR4

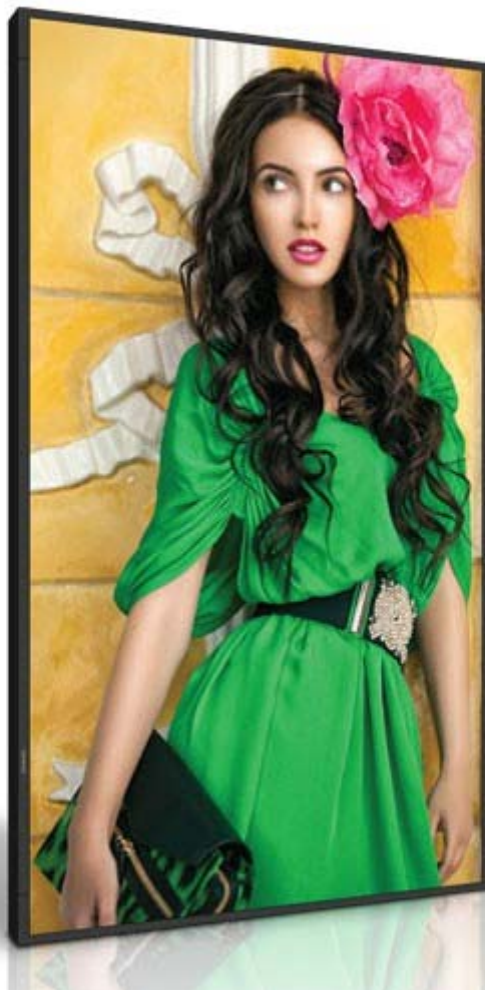

DynaScan

Version 1.00

The use of diagrams and illustrations in the manual for reference only, actual product may be different.


Product design and specifications are subject to change without notice

Contents

- Safety Precautions.....3
- Important Safety Information4
- Declaration of Conformity6
- Getting Started.....7
 - Contents.....7
 - Installing and Replacing Remote Control Batteries8
- Installation.....9
 - Mounting9
 - Connecting To a Power Source.....13
 - Connecting an External Video Source.....13
 - Connecting Multiple Displays.....14
 - Connector Positions.....15
 - Input / Output Terminals16
- Operating Instructions.....17
 - Powering On/Off the Display17
 - Using the Remote Control17
 - Using the Rear Panel Controls20
- Navigating the On Screen Display (OSD) Menu21
- Specifications.....29
 - Input Mode30
 - Pin Assignments31
 - Digital RGB Output (DVI-D): DVI31

Digital RGB Input (DVI-D): DVI.....	31
RS-232 Output.....	32
RS-232 Input.....	32
Troubleshooting.....	33
Recycling and Energy Information.....	34
Material Contents Declaration.....	35

Safety Precautions

CAUTION	
	Do not install display in a wet environment or place anything on the top of the display filled with liquid, such as vase or beverage.
	Do not install near flammable objects, such as gasoline or other volatile liquids.
	Do not install near any heat sources such as radiators or other heating devices.
	Do not install in the dusty environment.
	Do not damage the power cord or plug.
	Do not disassemble the screen to avoid electric shock.
	The product can normally operate only under 2000m in altitude. In installations at altitudes above 2000m, some abnormalities may be experienced.



WARNING	
	After extended use the heat sink behind the screen may be hot. Do not touch to avoid being burned.
	Do not touch the screen panel with sharp objects or extreme pressure to avoid damage to the panel.
	The display should be installed in well-ventilated place, do not install in a confined space.
	Do not drop or allow any object to fall to the screen.
	Do not touch the screen with wet hands to avoid electric shock.
	When cleaning, unplug the monitor. Use a soft, dry cloth to wipe the screen off. Do not use alcohol or other chemical liquids.
	If you smell smoke or hear a strange noise, immediately unplug the monitor and contact the vendor.
	Do not discard this product with general household waste. Please be sure to comply with the local waste regulations.
	Suitable for mounting on concrete or other non-combustible surface only.

IMAGE BURN-IN WARNING	
	When a stationary or fixed image is displayed for a long time on the screen, the image may be permanently imprinted on the screen. This phenomenon is known as image burn-in and is not covered by the manufacturer's warranty.
	In order to avoid burn in, avoid prolonged display of static or fixed images on the screen.

Important Safety Information

- Disassembling the LCD is strictly prohibited. Opening the cover may expose the user to shock or other hazards. Please contact DynaScan certified service professionals for all maintenance requirements.
- Do not allow any liquid to enter the LCD. Also avoid placing the LCD close to water sources.
- Do not place heavy objects on the power cord. A damaged power cord might cause electric shock or fire.
- Do not bend, curl, or damage the power cord.
- The power cord must comply with local safety regulations.
- Do not damage or modify the prongs/pins and the ground contact on the power plug.
- Do not place the LCD on an unlevelled surface or an unstable vehicle. The LCD could fall over and cause substantial damage.
- Do not cover the vents and/or the heat sink.
- Do not install the LCD beside radiators or other heat sources. The installation site should have sufficient ventilation so the heat generated by the LCD can be dissipated.
- Do not use the Signage in a hot, humid, dusty, or fummy environment.
- Handle the LCD with care. Save the packaging materials for the next transport.
- Please clean the backside of the LCD at least once a month for dust and other particles.

Unplug the LCD immediately and contact a DynaScan certified service professional as soon as possible when any of the following situations occurs:

- Damaged power cord or power plug.
- If liquid or foreign objects has entered the LCD.
- If the LCD has been exposed to rain or water.
- If the LCD has been dropped or the casing has become damaged.
- If you notice any structural damage such as cracks, or unnatural vibration.
- If the LCD cannot be operated following the steps outlined in this manual.
- If the LCD emits smoke or other odors, or generates strange noises.

Operating Suggestions

- Avoid displaying a stationary image for a long period of time in order to prevent image sticking.

Cleaning the Panel

- Use a soft, lint-free cloth to gently wipe dust off the screen panel.
- Do not use any hard material to wipe the panel.
- Do not poke the panel with your hand or any sharp object (such as a pen or a nail) or exert excessive pressure to the panel to prevent damage to the panel.
- Do not use any cleaning solution on the panel as it might cause discoloration.

Cleaning the Casing

- Unplug the power cord.
- Gently wipe the casing with a soft cloth.

Attention

- Do not use any of the following solutions to clean the casing as they may damage the paint and cause it to crack or peel: benzene solution, alkaline solution, alcohol-based cleaning solution, glass cleaner, wax, polisher, or detergent.

Declaration of Conformity

FCC Verification

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Information

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Declaration of the Manufacturer
<p>We hereby certify that the Professional LCD DS851LR4 is in compliance with</p> <p>Low Voltage Directive 2006/95/EC</p> <p>Electromagnetic Compatibility Directive 2004 /108 /EC</p> <ul style="list-style-type: none">EN 55032:2015+AC:2016-07 Class A ITEEN 55032:2012+AC:2013 Class A ITEEN 61000-3-3:2013EN 55024:2010+A1:2015EN 61000-4-2:2009EN 61000-4-3:2006+A1:2008+A2:2010EN 61000-4-4:2012EN 61000-4-5:2014EN 61000-4-6:2014EN 61000-4-11:2004 <div style="text-align: right;"><p>DynaScan Technology, Inc.</p></div>




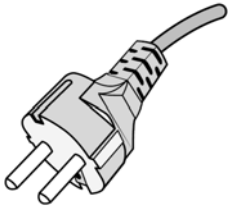
Getting Started

Contents

Confirm the accessories below are included with the display. If any item is missing, please contact your dealer. The color and shape of the accessories may vary by product.

- DS851LR4 Professional LCD
- Remote Control x1 pc
- Batteries (1.5V / AAA) x2 pcs
- Power cable x1 pc
- Quick Start Guide x1 pc

Attention: Please use the following table to check whether the included power cord is suitable for your region. If the power cord does not match your region, please contact your local supplier. Please use matching AC socket in order to meet local safety regulations.

Plug Type	North America	European Continental
Plug Shape		
Region	U.S.A. / Canada	EU (Except U.K.)
Voltage	220V	230V

Installing and Replacing Remote Control Batteries

1. Open the battery compartment cover.
2. Insert 2 new AAA batteries.
3. Close the battery compartment cover.

Warning:

- Incorrect usage of batteries may cause leakage or explosion.
- Pay attention to the polarity when installing batteries.
- Do not use batteries from different brands together. Do not mix new and used batteries. Doing so may shorten the battery life or cause leakage.
- Remove the batteries or replace them with a new pair when the batteries are depleted in order to prevent battery leak in the battery compartment.
- Do not touch the leaked substance from the batteries in case of a battery leak. Doing so may damage human skin.

Note: if you plan on not using the remote control for a long period of time, we recommend removing the batteries from the remote control.

Installation

The LCD must be properly installed using a wall mount. Incorrect installation may cause injury or damage the equipment. Product warranty does not cover damages caused by improper installation and DynaScan shall not be held responsible in such incident.


Mounting

- Hanging the Professional LCD from the ceiling or mounting it on the wall is the responsibility of the user. Not all ceilings or walls provide enough strength to support the LCD. The LCD may drop and cause serious injury if it is hanging from the ceiling with insufficient support or is mounted on a slanted wall. Product warranty does not cover improper installation, modification, or damages caused by natural disasters. DynaScan recommends hiring certified professionals to evaluate the installation site and mounting operation.
- Do not to cover the vent and/or the heat sink in order to ensure proper heat dissipation.
- Refer to the installation guide provided by manufacturer of the mount for proper installation.

When mounting on a wall or hanging from a ceiling


- A wall mount is not included in the accessory. Please purchase a VESA Standard wall mount to secure the LCD. DynaScan is not responsible for damages caused by using non-standard wall mounts.
- Verify that the mounting location can support the weight of the LCD before installation.
- The installation angle must be within 15 degrees of the vertical axis.
- Do not install the wall mount while the power is turned on as it may cause serious injury from electrical shock.

Model Number	VESA (mm)		Screw specification	Screw Length	Number
DS851LR4	(A * B)	600 * 400	M6	Greater than 10mm (not including wall mount thickness)	4

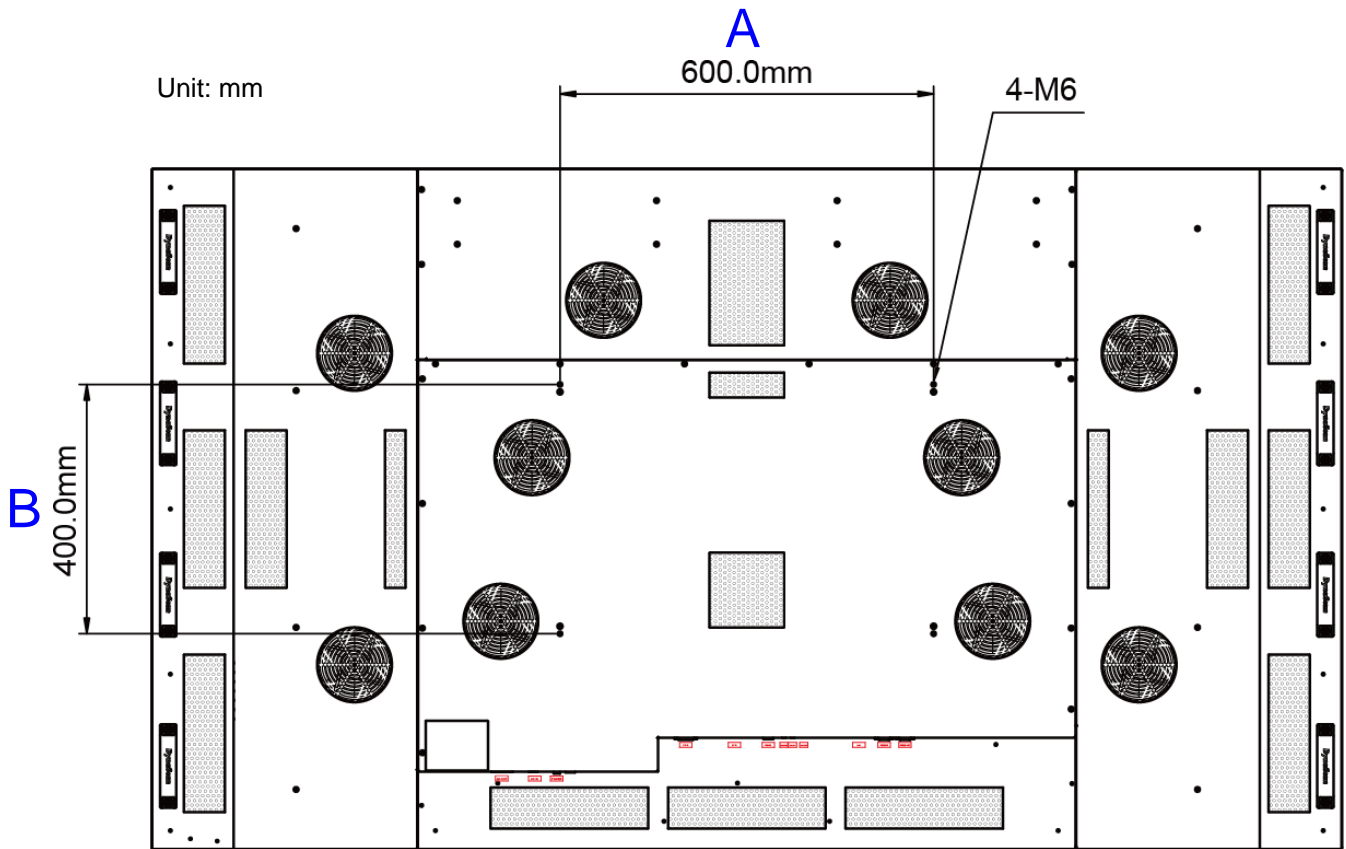


Orientation

- When used in the portrait orientation, the LCD should be rotated clockwise such that the left edge becomes the top edge.

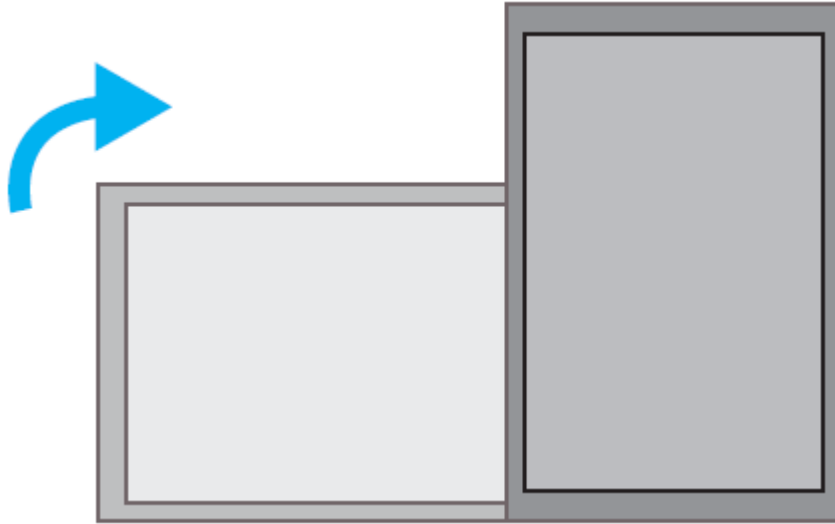

Installation Location

- The ceiling or the wall must have enough strength to support the LCD and its accessories.
- Do not install in a location with strong vibrations or is dusty.
- Do not install near the building's main electric panel.
- Do not install at a location where the LCD can be easily removed by the general public.
- When installed in an alcove, leave at least 10cm (4") of space around the LCD to ensure proper ventilation.

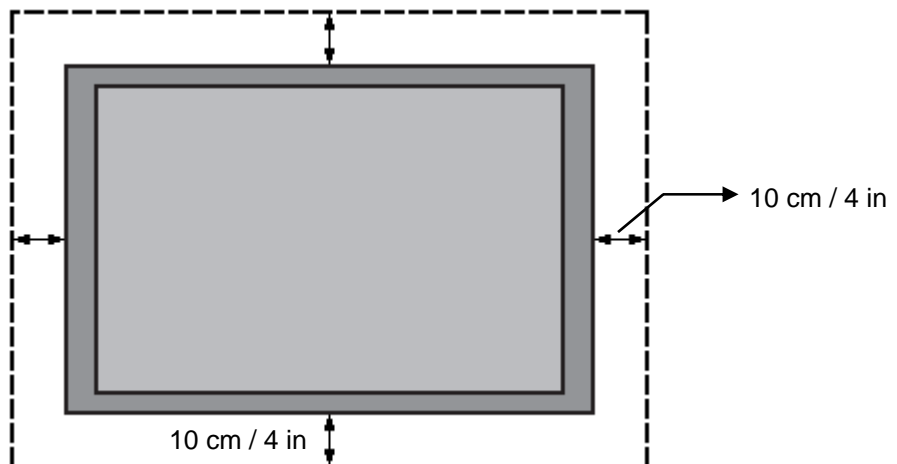

When hanging from a ceiling


- Ensure that the ceiling is strong enough to support the LCD and its accessories. Also consider the effects of earthquake, unexpected vibration, and other external forces when evaluating the ceiling strength.
- The LCD should be secured to the building's structural frame, such as a beam, and not to materials such as light steel frame or interior decoration.
- Do not use wood screws or dry wall anchors for installation.


Maintenance

- Inspect the fasteners regularly for signs of loosening or deformation. Please perform appropriate corrective measures when a problem is identified. Neglecting the problem may worsen the situation.
- Increase the inspection frequency on areas where previous maintenance had occurred to ensure the problems do not occur again.

Connecting To a Power Source



Using the power cable provided, insert the female connector into the back of the display shown the in the diagram below. Connect the male end of the power cable to a 200-240 volt, 50 / 60Hz AC power outlet.

 Insert the plug completely into the socket. A loose power connection may cause damage to the display and/or pose a fire hazard.

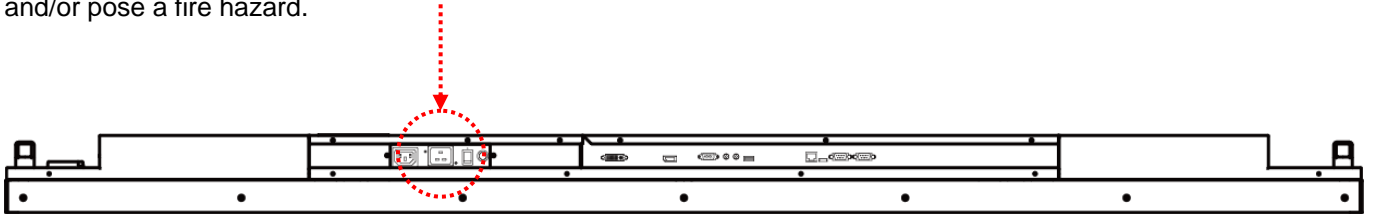


Connecting an External Video Source


Turn OFF the power to both the LCD and the external video device. Using the DVI (DP/ VGA) cable, insert one end into the DVI (DP/ VGA) -IN on the back of the display shown the in the diagram below. Connect the other end of the DVI (DP/ VGA) cable to the DVI (DP/ VGA) output of the video source. Refer to your video device's product manual for additional information.

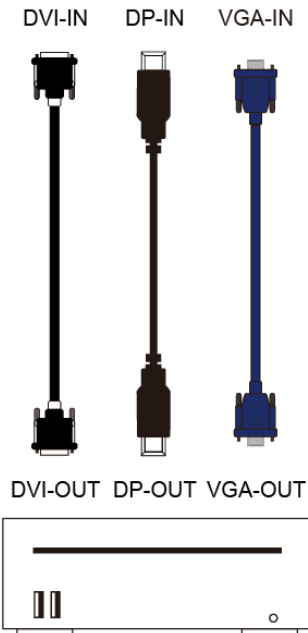

Connecting Multiple Displays

In a daisy chain configuration, the RS-232 signal enters through the 1st display and looped to the rest of the display. To control multiple displays into the chain with the supplied RS-232 cable. Using the RS-232 cable provided, connect the RS-232 OUT of the 1st display to the RS-232 IN of the 2nd display. Repeat connection for remaining displays.

 **Note:** The DynaScan “Display Manager” application is required to be installed on the PC in order to use the External Control feature.

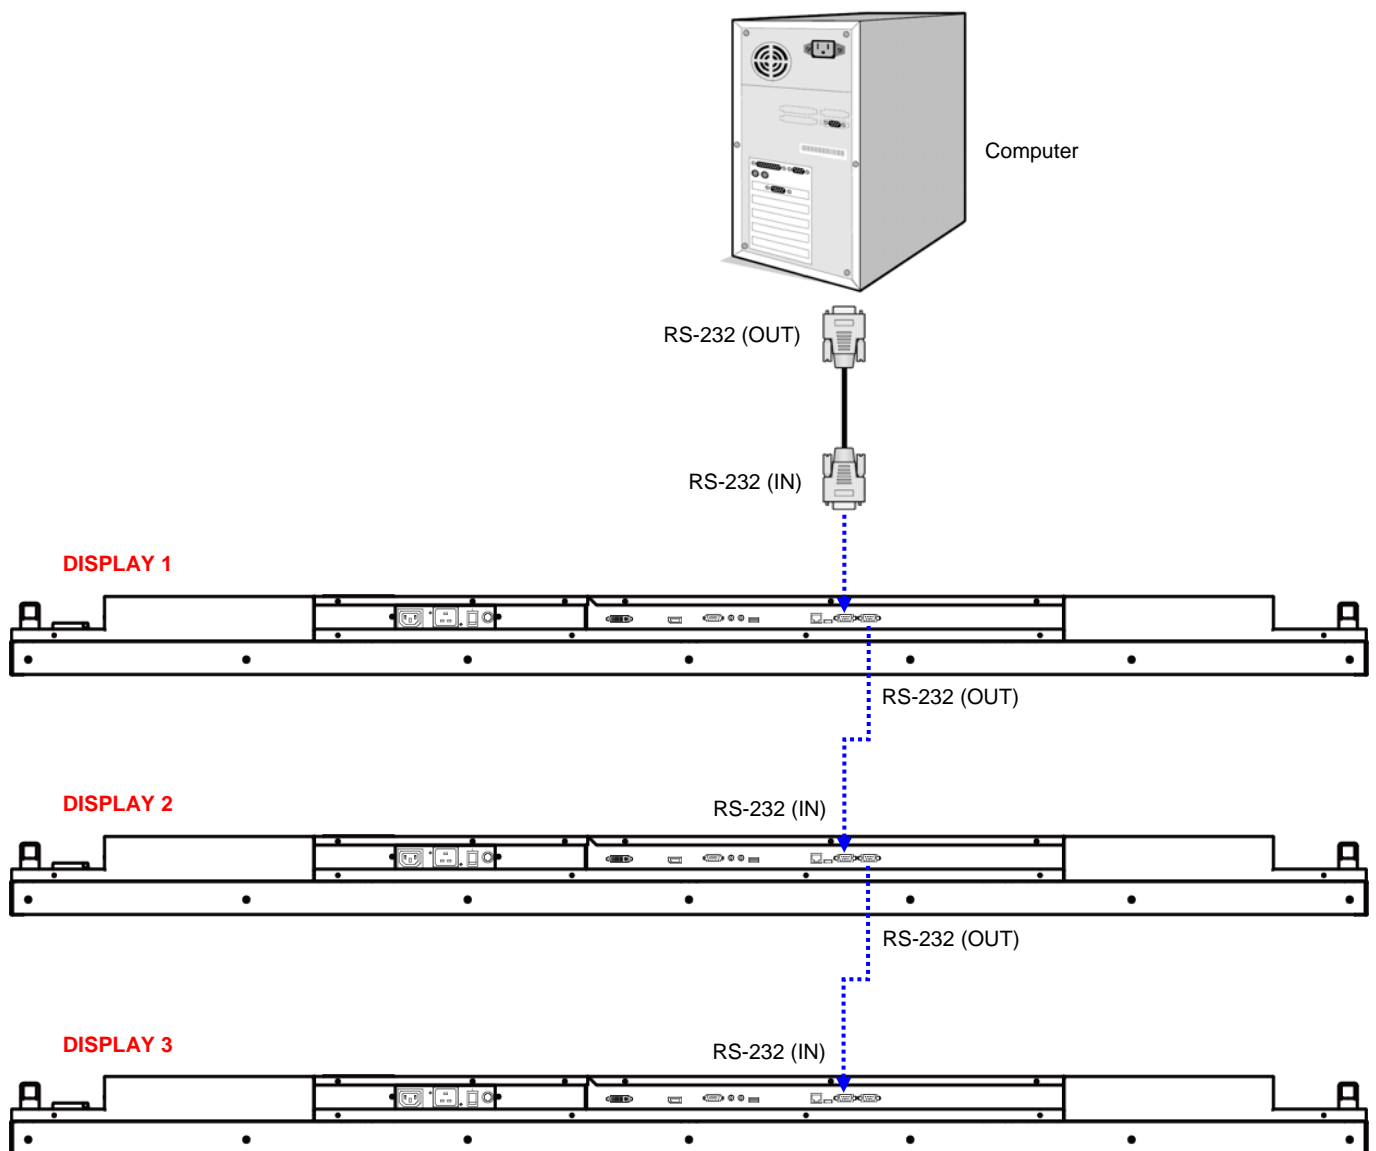


Connector Positions

①	②	③	④	⑤	⑥	⑦
DVI (IN)	Display Port (IN)	VGA (IN)	Audio (OUT)	Audio (IN)	USB (IN)	RJ-45(IN)

⑧	⑨	⑩	⑪	⑫
RS-232 (IN)	RS-232 (OUT)	AC (OUT)	AC (IN)	Power Switch

DS851LR4

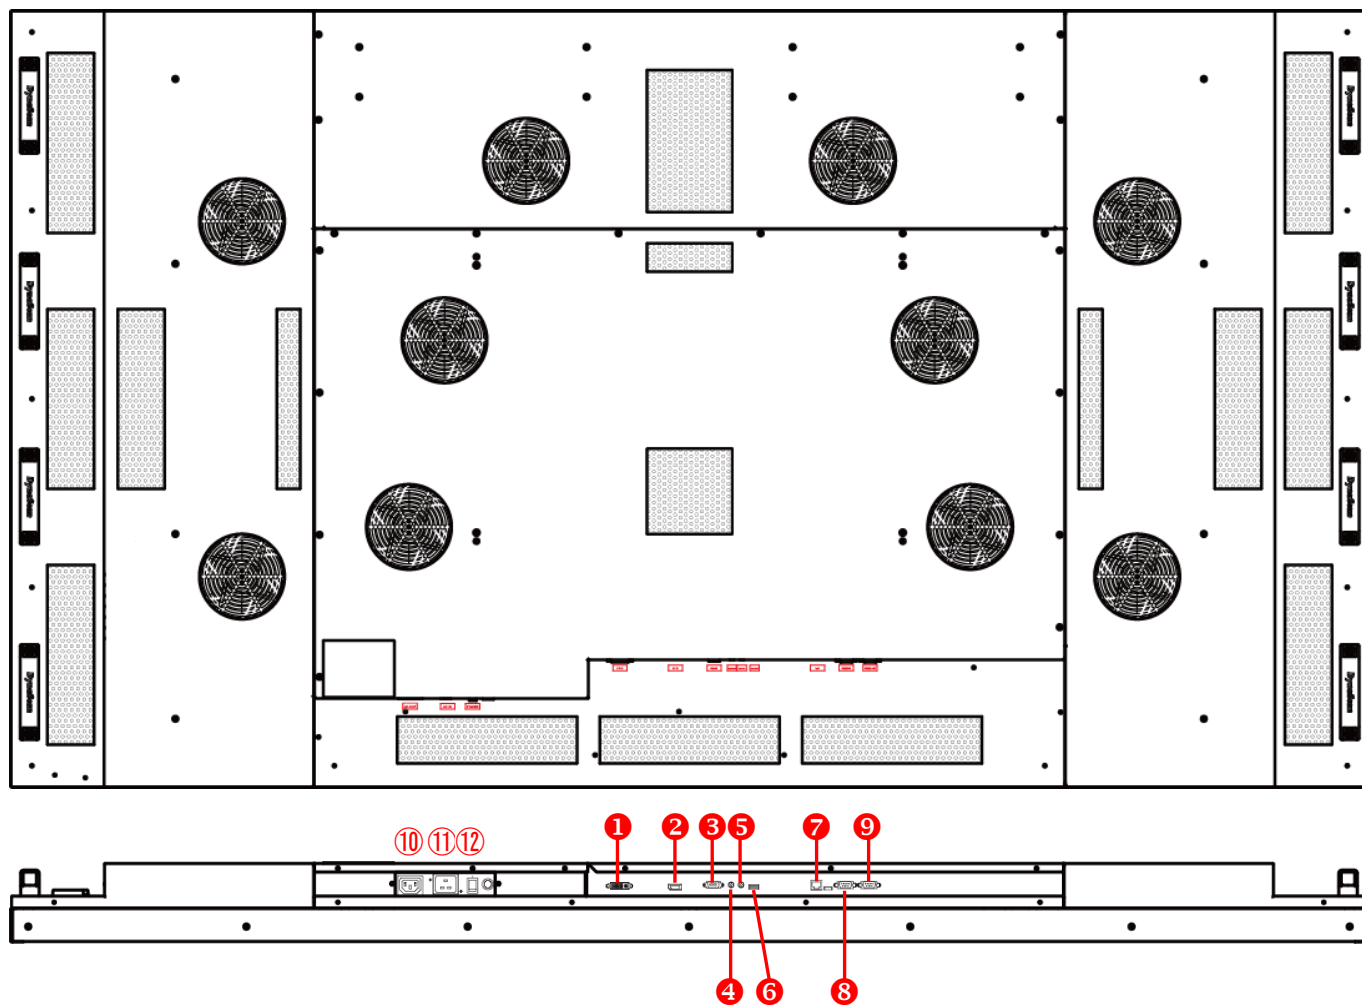


Input / Output Terminals

- ① **DVI (IN):** Connect the DVI-D output of a PC, or the HDMI output of an AV device by using a DVI-HDMI cable.
(Support up to 1920 x 1080 output resolution)
- ② **Display Port (IN):** Connect the DP output of a PC, or the DP output of an AV device via a DP cable.
(Support up to 3840 x 2160 output resolution)
- ③ **VGA (IN):** Connect the VGA output of a PC, or the VGA output of an AV device via a VGA cable.
(Support up to 1920 x 1080 output resolution)
- ④ **Audio (OUT):** Connect the audio signal output from Audio IN jack to an external AV device.
- ⑤ **Audio (IN):** Connect audio input from external AV device.
- ⑥ **USB (IN):** For service only, upgrade the firmware version.
- ⑦ **RJ-45 (IN):** RJ45 network input connection for the use of remote control from computer.
- ⑧ **RS-232 (IN):** RS232C network input connection for the use of remote control from computer.
- ⑨ **RS-232 (OUT):** RS232 control function for the daisy chain application.
- ⑩ **AC (OUT):** AC outlet 200~240V up to 100 Watt.
- ⑪ **AC (IN):** Connect the supplied power cord to the wall outlet.
- ⑫ **Power Switch:** Press to switch the main power on/off.

Operating Instructions

Powering On/Off the Display

To turn on/off the display, press the power switch on the back of the display as shown in the diagram below.

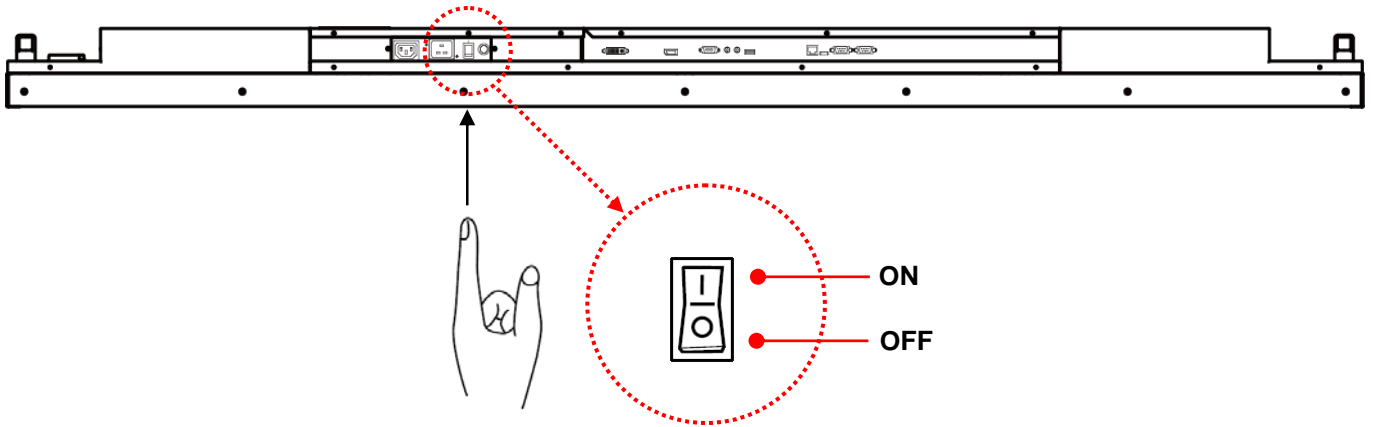

NOTE: the remote control only works when the main switch is in the ON position.


Using the Remote Control

When using the remote control, aim the remote at the IR receiver on the display. The IR receiver on the DS851LR4 model is at the front of the display with a receiving angle of 100 degrees. The IR receiver configurations of the model are shown in the figure below.


The operating range of the remote control is 2.5 meters (8 feet).

Ambient light may affect the performance of the remote control. Avoid fluorescent or neon lights in the vicinity.

DS851LR4

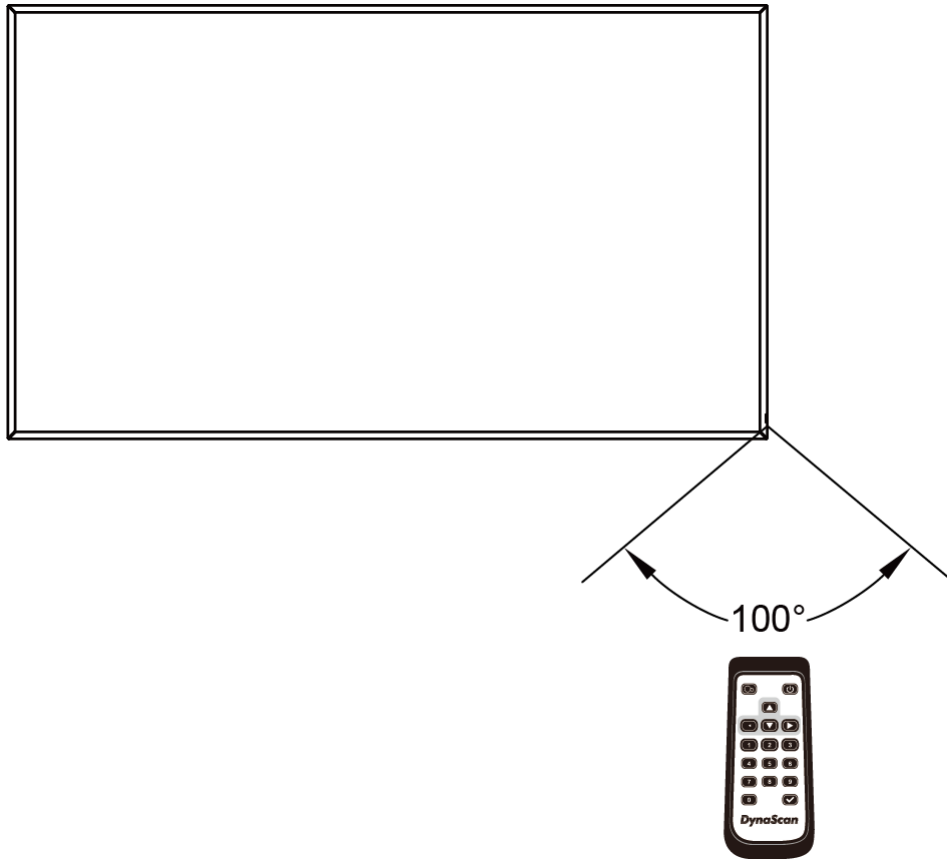


Using the Remote Control (cont.)

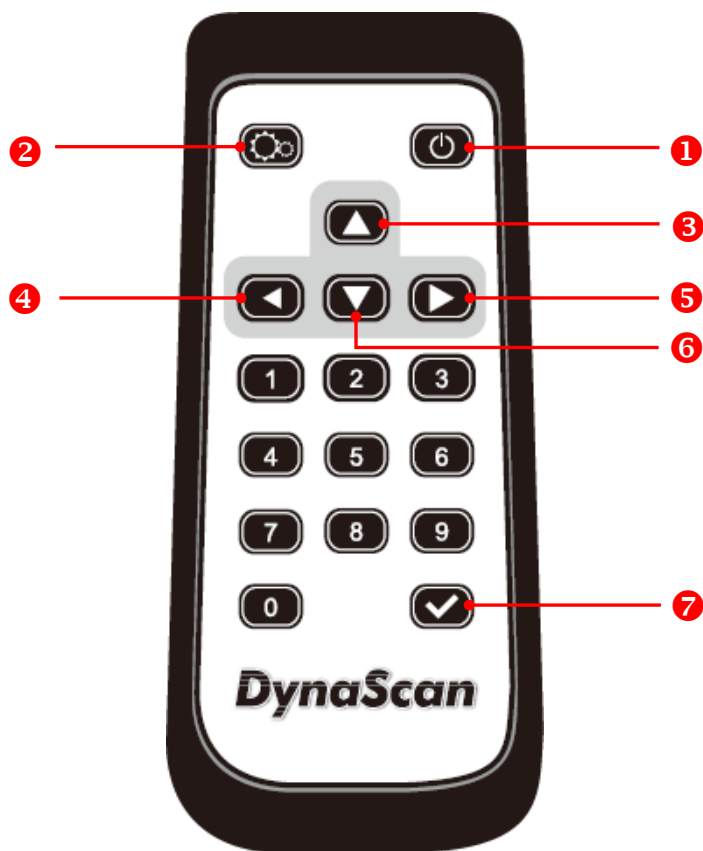

Color and shape may vary by model.

ITEM		DESCRIPTION
❶	POWER	Power On / Off
❷	MENU / EXIT	OSD On / Off and exit the current selection.
❸	UP	Move the cursor up or change the setting of selected item.
❹	LEFT	Move the cursor left or change the setting of the selected item.
❺	RIGHT	Move the cursor right or change the setting of the selected item.
❻	DOWN	Move the cursor down or change the setting of the selected item.
❼	ENTER / INPUT	Select the highlighted item and input signal switching key.


Using the Rear Panel Controls

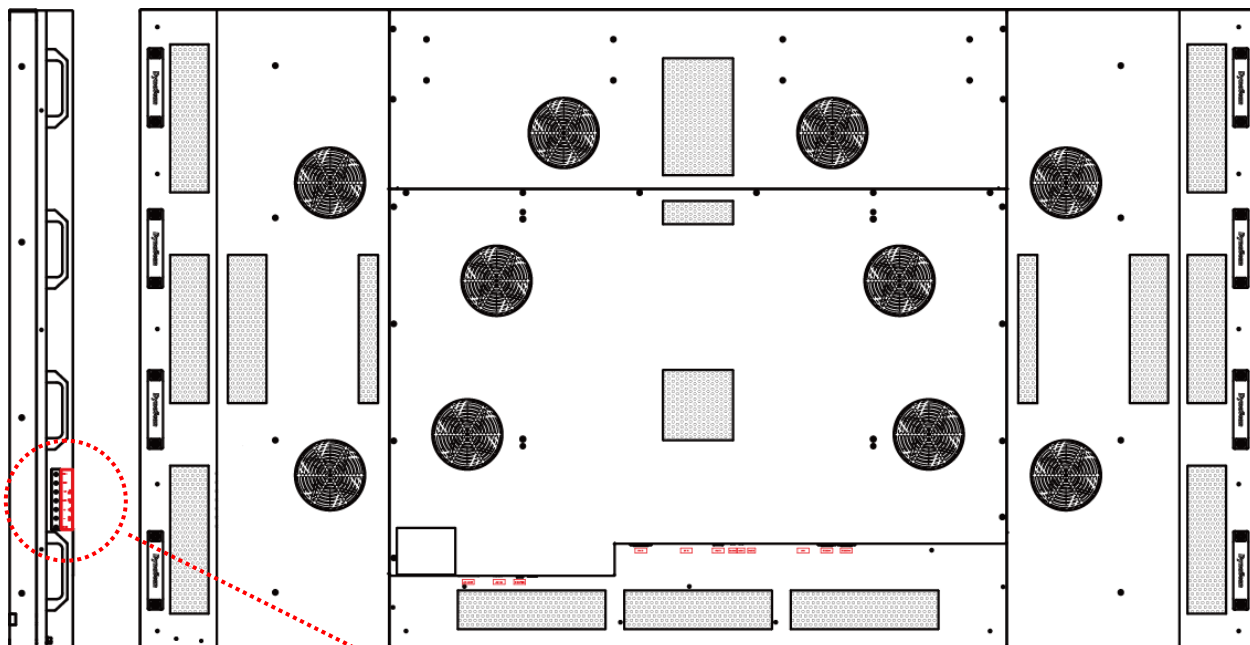

ITEM	DESCRIPTION
POWER	Power On / Off
MENU	OSD On / Off and exit the current selection.
UP	Move the cursor up or change the setting of the selected item.
DOWN	Move the cursor down or change the setting of the selected item.
+	Move the cursor right or change the setting of the selected item.
-	Move the cursor left or change the setting of the selected item.
ENTER	Select the highlighted item and input signal switching key.


Navigating the On Screen Display (OSD) Menu

Press the MENU button on either the real panel control or remote control to display the OSD. Use the navigation arrows to select and adjust menu items.

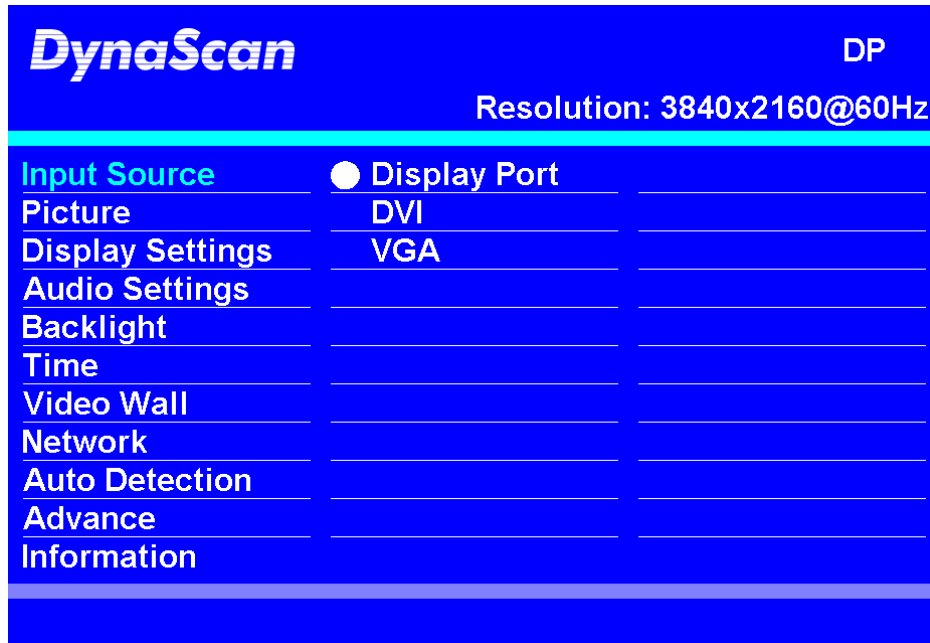


ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Input Source	Display Port		Choose DP as the specific input source.
	DVI		Choose DVI as the specific input source.
	VGA		Choose VGA as the specific input source.

Note: This function is only valid when FairOver1, FairOver2 and FairOver3 are all set to none.

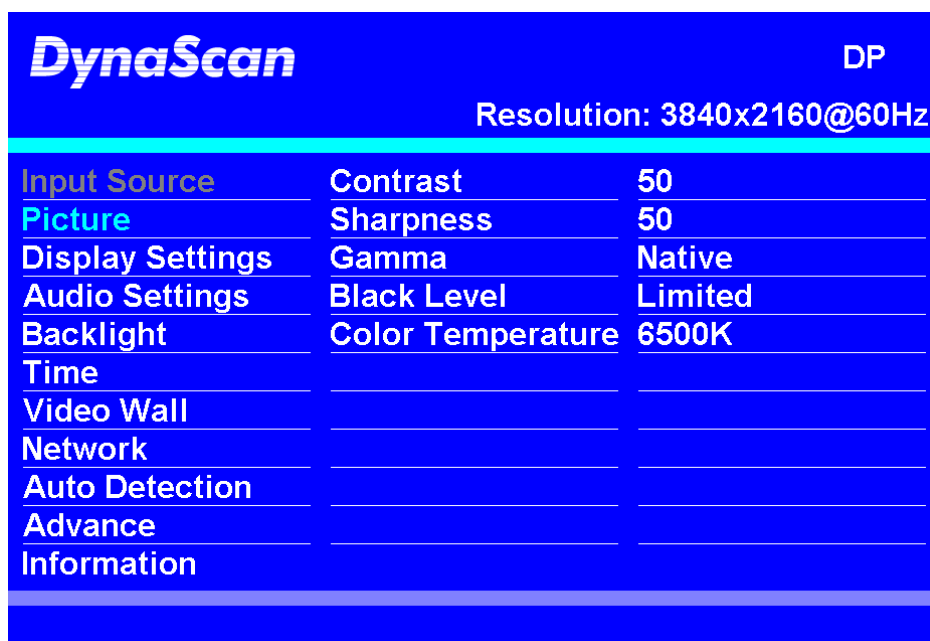

ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Picture	Contrast	50	Adjust the contrast level. Range 0 – 100.
	Sharpness	50	Adjust the sharpness level. Range 0 – 100.
	Gamma	Native	Adjusts the Gamma value. (Native, 1.8, 2.0 and 2.2)
	Black Level	Limited	Selects the black level to adjust the screen gray scale. "Limited" for video source uses 16 to 235 levels for R/G/B, such as HDMI. "RGB Full" for video source uses all levels from 0 to 255 levels.
	Color Temperature	6500K	Select the color temperature. (5500K, 6500K, 9300K and User).

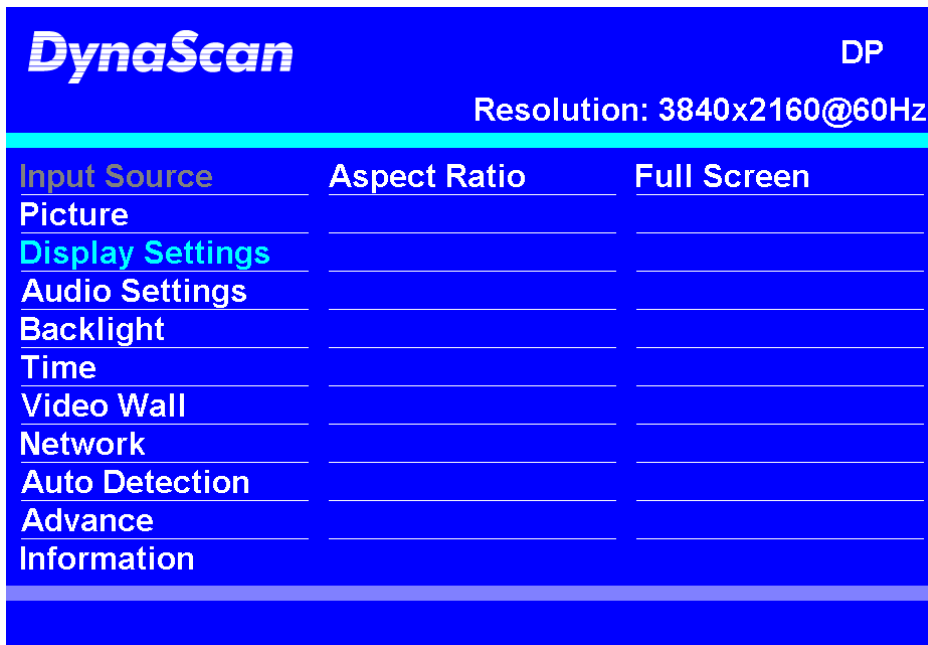

ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Display Settings	Aspect Ratio	Full Screen	Select the aspect ratio. (Full Screen / Original)

Input Source	Volume	50
Picture	Mute	Off
Display Settings		
Audio Settings		
Backlight		
Time		
Video Wall		
Network		
Auto Detection		
Advance		
Information		

ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Audio Settings	Volume	50	Adjust the volume. Range 0 – 100.
	Mute	Off	Turn On / Off Mute adjustment.

Input Source	Auto Brightness	Off
Picture	High Level	100
Display Settings	Low Level	20
Audio Settings	High Level Time	00 : 00
Backlight	Low Level Time	00 : 00
Time	Local Dimming	Medium
Video Wall		
Network		
Auto Detection		
Advance		
Information		

ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Backlight	Auto Brightness	Off	To turn On / Off the auto brightness adjustment. (Off, On and Timer) Note: With AUTO BRIGHTNESS off, the screen brightness will remain at HIGH LEVEL brightness value. With AUTO BRIGHTNESS on (Auto), the display brightness adjusts according to the ambient light. When ambient

			light is bright, the screen will adjust to the set HIGH LEVEL brightness value; when ambient light is dark, the screen will adjust to the set LOW LEVEL brightness value. When the Timer mode is set, the display will automatically switch the brightness according to the set time.
	High Level	100	Adjusts the highest brightness level. Range 0 – 100.
	Low Level	20	Adjusts the lowest brightness level. Range 20 – 100.
	High Level Time	HH:MM	Set high level time.
	Low Level Time	HH:MM	Set low level time.
	Local Dimming	Medium	Adjusts the contrast. High is the highest contrast. Off is the lowest contrast. (Low, Medium, High and Off)

DynaScan

DP

Resolution: 3840x2160@60Hz

Input Source	Power Control Timer	Off
Picture	Current Time	12 : 00
Display Settings	Power On Time	00 : 00
Audio Settings	Power Off Time	00 : 00
Backlight		
Time		
Video Wall		
Network		
Auto Detection		
Advance		
Information		

ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Time	Power Control Timer	Off	Turn on / off automatic power schedule function.
	Current Time	HH:MM	Set the clock. Note: The internal clock will continue to function when the power is turned off.
	Power On Time	HH:MM	Set turn-on time.
	Power Off Time	HH:MM	Set turn-off time.

Input Source	Number Of Rows	1
Picture	Number Of Columns	1
Display Settings	Row Position	1
Audio Settings	Column Position	1
Backlight	Bezel Compensation	Off
Time		
Video Wall		
Network		
Auto Detection		
Advance		
Information		

ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Video Wall	Number Of Rows	1	Set number of rows in a video wall. Note: The maximum number of rows in a daisy chain is 15.
	Number Of Columns	1	Set number of columns in a video wall. Note: The maximum number of columns in a daisy chain is 15.
	Row Position	1	Vertical position in a video wall.
	Column Position	1	Horizontal position in a video wall.
	Bezel Compensation	Off	Choose to turn the frame compensation function on or off. When turned on, the display will adjust the image to compensate the width of display bezels in order to accurately display the image.

Input Source	DHCP	Off
Picture	IP	192.168.0.100
Display Settings	Mask	255.255.255.0
Audio Settings	Gateway	192.168.0.1
Backlight		
Time		
Video Wall		
Network		
Auto Detection		
Advance		
Information		

ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Network	DHCP	Off	Choose to enable or disable the DHCP function. If enabled, the display will assign the IP address, Subnet mask and Default gateway automatically. If disabled, the following values will be entered manually.
	IP	192.168.0.100	Assign IP address.
	Mask	255.255.255.0	Assign Subnet mask.
	Gateway	192.168.0.1	Assign Default gateway.

Input Source	FailOver 1	DisplayPort
Picture	FailOver 2	DVI
Display Settings	FailOver 3	VGA
Audio Settings		
Backlight		
Time		
Video Wall		
Network		
Auto Detection		
Advance		
Information		

ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Auto Detection	FailOver 1	Display Port	Choose the input source in order. (None, Display Port, DVI and VGA)
	FailOver 2	DVI	Choose the input source in order. (None, Display Port, DVI and VGA)
	FailOver 3	VGA	Choose the input source in order. (None, Display Port, DVI and VGA)

DynaScan


DP
Resolution: 3840x2160@60Hz

Input Source	Language	English
Picture	OSD Orientation	Landscape
Display Settings	OSD Transparency	0
Audio Settings	OSD Timer	15 Sec
Backlight	Screen Protection	0 Min
Time	Remote Control	RS232
Video Wall	IR Control	On
Network	Factory Reset	
Auto Detection		
Advance		
Information		

ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Advance	Language	English	Support in English version only.
	OSD Orientation	Landscape	Change the orientation of the Menu. The Menu can be displayed in either LANDSCAPE or PORTRAIT mode.
	OSD Transparency	0	Adjust OSD Transparency level. Range 0 -100.
	OSD Timer	15 Sec	Adjust OSD Timer level. Range 15 - 60.
	Screen Protection	0 Min	Sets image burn-in protection interval.
	Remote Control	RS232	Choose to use the remote control function RS232 or Network.
	IR Control	On	Enable/disable the remote control for Menu. Note: When disabled, the remote control function can be enabled again from the control panel on the display or through the DynaScan "Display Manager" application.
Factory Reset		Restore all settings to default. Note: It does not modify CURRENT TIME.	

Input Source	Model	DS851LR4
Picture	Serial Number	XXXXXXX
Display Settings	Hardware Version	Rev.XX
Audio Settings	Firmware Version	Vx.xx
Backlight		
Time		
Video Wall		
Network		
Auto Detection		
Advance		
Information		


ITEM 1	ITEM 2	DEFAULT	DESCRIPTION
Information	Model	DS851LR4	The display's model.
	Serial Number		The display's serial number.
	Hardware Version		The H/W version.
	Firmware Version		The F/W version.

 Some functions may not be available for all models.

*Adjusted value: Each R/G/B value for this product has been individually adjusted in during production to a preset color temperature of 6500K.

Specifications

MODEL		DS851LR4
PANEL	LCD Panel Size	85 inches
	Native Resolution	3840 x 2160
	Brightness	3500 cd/m ² (Typ.)
	Contrast Ratio	5,000:1
	Response Time	6.5 ms (Typ.)
	Viewing Angle	178° / 178°
	Life Time	50,000 hrs (Typ.)
	Panel Surface	Haze 0.5%
POWER	Power Supply	Internal
	Rated Voltage	200 ~ 240V, 50 / 60Hz
	Power On Mode	1600W (TBC)
	AC Out	< 100W
MECHANICAL SPECS	Bezel Width (T/B/L/R)	Even bezel 18 mm
	Cabinet Color	Black
	Monitor Dimension (LxHxD, w/o Stand)	1912 x 1093 x 108.6 mm
	Monitor Weight (set / package)	76.5 kg / 100 kg
	VESA Mounting (Dimension)	4 Holes (600x400 mm)
USER INTERFACE	OSD Language	English
ENVIRONMENT	Operation Temperature	0 °C ~ 40 °C
	Storage Temperature	-20 °C ~ 60 °C
	Humidity	10%~80% RH Non-Condensing
I/O Ports	DVI	IN *1
	Display Port	IN *1
	VGA	IN *1
	RS-232	IN *1 / OUT *1
	RJ-45	IN *1
	Audio	IN *1 / OUT *1
	USB	IN *1 (Service Port)

 Design and specifications are subject to change without notice.


Input Mode

Active Resolution		Refresh Rate	Pixel Rate	Aspect Ratio
H Pixels	V Lines			
640	480	60 Hz	25.175 MHz	4:3
720	480	59.94 Hz	27 MHz	4:3
800	600	60 Hz	40 MHz	4:3
1024	768	60 Hz	65 MHz	4:3
1280	720	60 Hz	74.25 MHz	16:9
1280	768	60 Hz	79.5 MHz	5:3
1360	768	60 Hz	85.5 MHz	16:9
1920	1080	60 Hz	148.5 MHz	16:9
3840	2160	60 Hz		16:9

Pin Assignments

Digital RGB Output (DVI-D): DVI

PIN ASSIGNMENT OF DVI CONNECTOR					
01	TX2-	09	TX1-	17	TX0-
02	TX2+	10	TX1+	18	TX0+
03	Shield (TX2 / TX4)	11	Shield (TX1 / TX3)	19	Shield (TX0 / TX5)
04	NC	12	NC	20	NC
05	NC	13	NC	21	NC
06	DDC-Serial Clock	14	+5V power	22	Shield (TXC)
07	DDC-Serial Data	15	Ground	23	TXC+
08	NC	16	Hot plug detect	24	TXC-

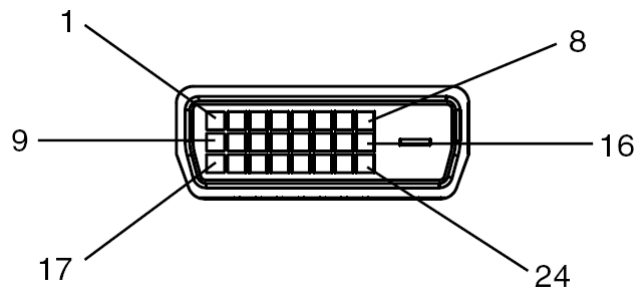


Digital RGB Input (DVI-D): DVI

PIN ASSIGNMENT OF DVI CONNECTOR					
01	RX2-	09	RX1-	17	RX0-
02	RX2+	10	RX1+	18	RX0+
03	Shield (RX2 / RX4)	11	Shield (RX1 / RX3)	19	Shield (RX0 / RX5)
04	NC	12	NC	20	NC
05	NC	13	NC	21	NC
06	DDC-Serial Clock	14	+5V power	22	Shield (RXC)
07	DDC-Serial Data	15	Ground	23	RXC+
08	NC	16	Hot plug detect	24	RXC-

RS-232 Output

PIN No.	NAME
01	connected to 7&8
02	RXD
03	TXD
04	connected to 6
05	GND
06	connected to 4
07	connected to 1&8
08	connected to 1&7
09	NC

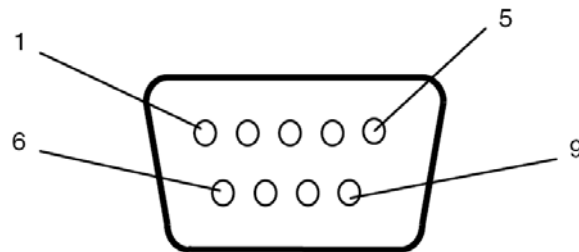

RS-232 Input

PIN No.	NAME
01	connected to 7&8
02	TXD
03	RXD
04	connected to 6
05	GND
06	connected to 4
07	connected to 1&8
08	connected to 1&7
09	NC

Troubleshooting

ISSUE	RECOMMENDED SOLUTION
No image is displayed.	<ul style="list-style-type: none"> • Check whether the signal input cable is completely plugged in. • Check whether the main switch is in the ON position, and the power cord is completely plugged in. • Check whether the signal input cable is damaged or bent excessively.
Nothing happens when switching the main switch on.	<ul style="list-style-type: none"> • Unplug the power cord from the socket and plug it back in after a few seconds to reset the Signage. <p>Note: Unplugging the power cord will not change the settings.</p>
Image is unstable.	<ul style="list-style-type: none"> • Check whether the signal input cable is completely plugged in.
The remote control does not work.	<ul style="list-style-type: none"> • Check whether there are batteries in the remote control. • Check the batteries for freshness, polarity, etc. • Check whether the remote is in the operation range. • Bright light may interfere with the remote control. Please avoid using the remote control near special fluorescent lights or neon lights.
Auto on/off does not work or does not function properly.	<ul style="list-style-type: none"> • Check whether the TIMER setting in the menu is set to "OFF". • Check whether the "Power On Time" and "Power Off Time" settings are set correctly.
Cannot control the display remotely via RS-232.	<ul style="list-style-type: none"> • Check whether the RS-232 cable is connected properly.

If you are still having trouble with your DynaScan DS² Professional LCD, contact your dealer or DynaScan directly for more assistance.

Recycling and Energy Information

DynaScan is firmly committed to its environmental protection efforts and we believe that reducing our products' impact on the environment is of the utmost importance. We are dedicated to meet the latest environmental protection regulations.

Energy usage

Mode	Energy consumption
Normal	1600 W (TBC)

Disposal

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new one, the retailer is legally obligated to take back your old appliances for disposal at least for free of charge.



Material Contents Declaration

Part Name	Hazardous Substances					
	Lead	Mercury	Cadmium	Hexavalent Chromium	Polybrominated Biphenyls	Polybromodiphenyl Ethers
	Pb	Hg	Cd	Cr ⁶⁺	PBB	PBDE
PCBA	○	○	○	○	○	○
CHASSIS	○	○	○	○	○	○
ACCESSORY	○	○	○	○	○	○
PACKAGE	○	○	○	○	○	○

“○” indicates that the level of the specified chemical substance is less than the threshold level specified in the standards of SJ/T-11363-2006 and EU 2005/618/EC.

“×” indicates that the level of the specified chemical substance exceeds the threshold level specified in the standards of SJ/T-11363-2006 and EU 2005/618/EC.

www.dynascanusa.com